


Pump air

When the device is refilled, air bubbles may form in the pump. As a result, the cleaning rollers do not approach the sound plate. Therefore, check that the rollers rotate and rest against the record when the cleaning process starts.

If the rollers do not move, remove the record and press several times on the resilient round body between the gears. This will remove the air in the pump.

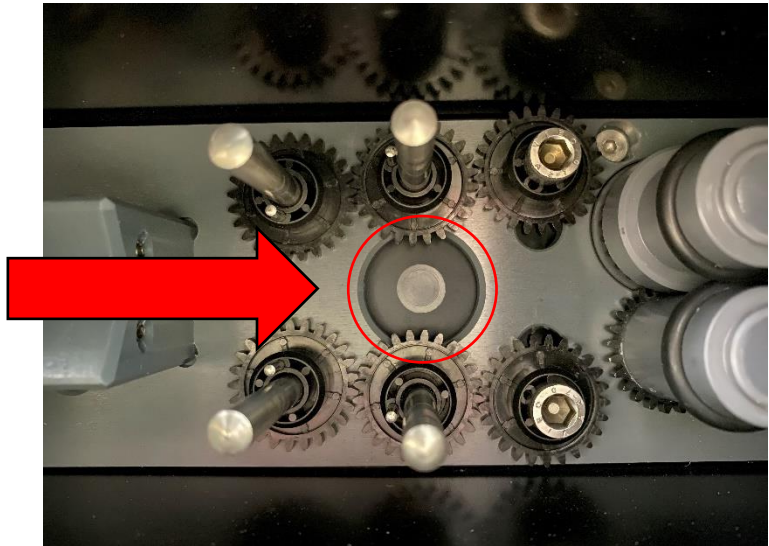

Removal of the record

When removing the record, it is best to place the right hand on the record and turn it out with the left upwards.



Make sure that the LP does not touch the wet cleaning rollers.